
# OWNER'S MANUAL

Great Basin® grease interceptors





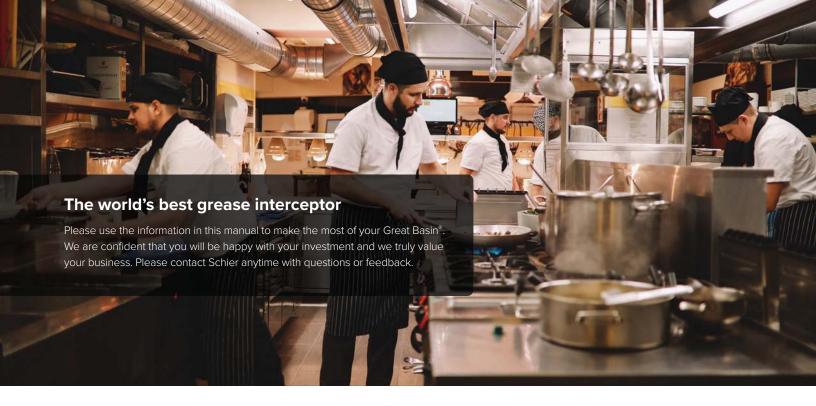

# Table of contents

Safety warnings	2
Why grease interceptors are necessary	3
Grease interceptor components	4
Great Basin <sup>®</sup> series identification and specifications	5-6
Suggested maintenance procedure	7
Calculating pump-out frequency	8
Core samples	9
Kitchen best management practices	10
Maintenance log	11

# History

The very first Great Basin® grease interceptor was installed in 2006, forging a new category in the world of grease interceptors. Prior to 2006, it was undersized steel grease traps inside of the building and oversized concrete grease interceptors outside of the building. These products offered little-to-no information in the way of performance. Worse, due to inferior materials and the corrosiveness of commercial kitchen wastewater, all of these units are guaranteed to fail.

The Great Basin® was designed to offer better performance and better pump-out information along with the only lifetime warranty in the industry. With thousands of installations coast to coast, Schier has a growing fleet of national restaurant brand specifications, installations at more than 40 professional sports stadiums, more than 100,000 restaurants, schools and corporate campuses. One World Trade Center and (we've been told) the White House.

# SAFETY WARNINGS

For all Schier Grease Interceptor Maintenance - Failure to heed these warnings may result in property damage, personal injury or death.

#### MARNING! HYDROGEN SULFIDE (H₂S) GAS

Large grease interceptors with low flows are conducive to creating septic conditions that can generate  $H_2S$  gases and the associated "rotten egg" odor. Produced naturally from decaying organic matter,  $H_2S$  vapors are noxious, highly toxic, flammable and potentially corrosive to metal and concrete. If inhaled, these vapors can be lethal, or cause you to lose consciousness and possibly fall into the grease interceptor and drown.

WARNING! Newer Schier grease interceptors feature a Safety Star® access restrictor in the accessway to help prevent accidental falls. Do not remove the Safety Star® from the accessway unless absolutely necessary. Never cut the tether that permanently attaches the Safety Star® to the accessway. Replace worn or damaged tethers promptly.

**WARNING!** Perform frequent interceptor maintenance that includes complete removal (pumpout) of all interceptor conents. Schier recommends a pumpout cycle of 30 to 90 days. Doing so will prevent buildup of dangerous H<sub>2</sub>S vapors, maintain sanitary conditions and ensure the interceptor performs as designed.

#### **WARNING!** CONFINED SPACE

All grease interceptors meet the OSHA definition of a confined space; they have the potential to contain a hazardous atmosphere, and contain material that could engulf an entrant (water, grease and solids). Enter the space only if necessary and follow established procedures:

- Test (monitor) the air in the space from the outside before entering.
- Test (monitor) the air in the space continuously during work operation.
- · Determine if entry permit is required.
- Ventilate area continuously to remove accumulated hydrogen sulfide.
- Make sure that rescue procedures, personnel, and equipment are in place.
- · Maintain contact with trained attendant.

WARNING! Never leave an open grease interceptor accessway unattended. Always replace the cover and secure with bolts if equipped. Failure to do so risks pedestrian injury or death. Replace damaged or missing cover bolts promptly.



# Why grease interceptors are necessary

Grease interceptors, sometimes called grease traps or grease pits, are required in most food service establishments. The primary function is to separate and store the fats, oils and grease that are washed down the drain during food prep and dishwashing. Without grease interceptors, fats, oils and grease will build up on the walls of drainage piping, ultimately causing a blockage. This can lead to an immediate back-up in your kitchen, or worse, the city's wastewater collection system. When a blockage happens


in the city's system, it can lead to a Sanitary Sewer Overflow (SSO), which results in raw sewage flooding out of manhole covers spreading dangerous bacteria into streets and walkways. SSOs are a leading cause of fresh water contamination and can be deadly for fish, plankton and other aquatic life. By properly maintaining your Great Basin\*, you are doing your part to protect the environment.





# Grease interceptor components

Generic side view diagram of a typical Great Basin® grease interceptor.

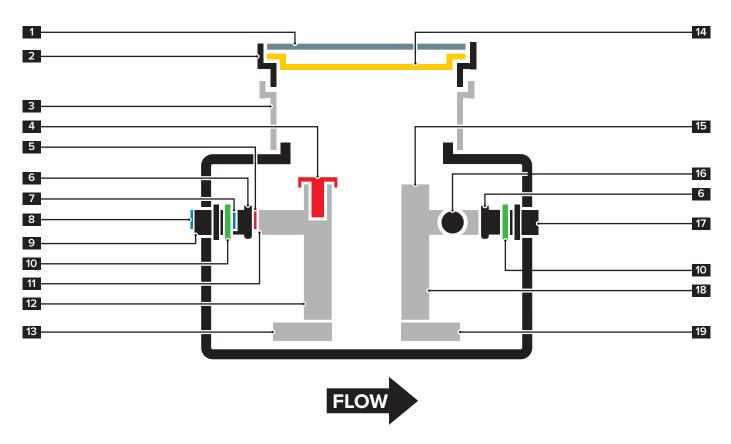

#### 1 Cover

#### 2 Cover adapter

Larger models (with 24" diameter covers) will have a cover adapter.

3 Riser

#### 4 Flow control cartridge

A red cartridge may be found here on models produced after 2018. If white, the cartridge is for preventing unit swamping and does not regulate flow.

#### 5 Flow control plate

A snap-in red plate that may be found on the snout of the inlet diffuser on any model produced from 2014 until 2019.

#### 6 Saddle adapter

Early GB1, GB2 and GB3 models feature this adapter which allows for easy insertion and removal of the inlet and outlet diffusers.

#### 7 Flow control plate

A snap-in white plate that may be found on the snout of the saddle adapter on indoor models produced from 2014 until 2019.

#### 8 6" Flow control plate

A screw-on white plate may be found here on models with 6" connections.

#### 9 Inlet bulkhead Connection

#### 10 Diffuser locking collar

Used to secure the diffusers (or saddle adapters) to the bulkhead connections.

#### 11 Flow control aperture

A permanent hole in the inlet diffuser snout used with all models produced prior to 2014.

#### 12 Inlet diffuser

#### 13 Inlet diffuser foot

Later models may have a foot attached to the inlet diffuser. If removed, ensure it is replaced and oriented so that the foot directs flow to the inlet endwall.

#### 14 Safety Star®

Access restrictor for newer models with 24" diameter covers.

- 15 Air relief/visual access
- 16 Optional outlet bulkhead connection
- 17 Outlet bulkhead connection
- 18 Outlet diffuser

#### 19 Outlet diffuser foot

Later models may have a foot attached to the outlet diffuser. If removed, ensure it is replaced and oriented so that the foot directs flow to the outlet endwall.


# Great Basin® identification and specifications

Since its introduction, the Great Basin® series has led the industry in hydromechanical interceptor design and performance. The series has evolved during that time, resulting in a variety of units with similar or identical model numbers but different shell designs and certified grease capacities. This section is provided to help you determine which interceptor you have installed. Locate the

product ID label located on the interceptor and make note of the model, 9-digit part number and the serial number. If buried, the label will be on the underside of the cover or the inner wall of the cover adapter. Contact customer service if unsure what model you have.


# Current model generation shown

### GB1

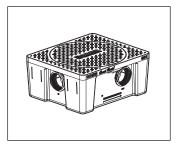


Years produced: 2017 - present Identification: Single 21" cover. Flow rates/grease capacities: 20 GPM / 70 lbs. (9.6 gal.) 25 GPM / 64 lbs. (8.9 gal.) Liquid capacity: 10 gal. Solids capacity: 1.3 gal.

### GB2-CT

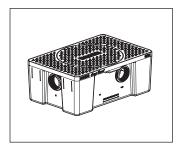


Years produced: 2017 - present Identification: Single 21" cover. Flow rates/grease capacities: 25 GPM / 126 lbs. (15 gal.) Liquid capacity: 20 gal. Solids capacity: 1.8 gal.

#### GB1-CT

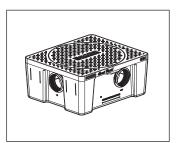


Years produced: 2017 - present Identification: Single 21" cover. Flow rates/grease capacities: 15 GPM / 70 lbs. (9.6 gal.) Liquid capacity: 10 gal. Solids capacity: 1.3 gal.

### GB3

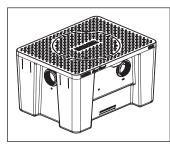


Years produced: 2017 - present Identification: Single 21" cover. Flow rates/grease capacities: 50 GPM / 272 lbs. (37.4 gal.) 75 GPM / 175 lbs. (24.1 gal.) Liquid capacity: 40 gal. Solids capacity: 1.9 gal.

### GB<sub>2</sub>

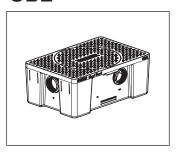


Years produced: 2017 - present Identification: Single 21" cover. Flow rates/grease capacities: 35 GPM / 130 lbs. (17.9 gal.) 50 GPM / 127 lbs. (17.5 gal.) Liquid capacity: 20 gal. Solids capacity: 1.8 gal.

### GB3-CT

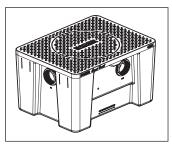


Years produced: 2017 - present Identification: Single 21" cover. Flow rates/grease capacities: 50 GPM / 272 lbs. (37.4 gal.) Liquid capacity: 40 gal. Solids capacity: 1.9 gal.

# GB2-2 (99%)

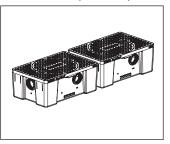

Years produced: 2019 - present Identification: Two 21" covers (2 tanks in series).
Flow rates/grease capacities:
35 GPM / 180 lbs. (24.7 gal.)
Liquid capacity: 40 gal.
Solids capacity: 3.6 gal.


### **GB-50**

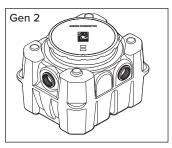

Years produced: 2019 - present Identification: 24" covers with Safety Star® access restrictors.
Flow rate/grease capacities:
50 GPM / 439 lbs. (60 gal.)
75 GPM / 287 lbs. (39 gal.)
Liquid capacity: 65 gal.

Solids capacity: 13 gal.

### **GB-75**

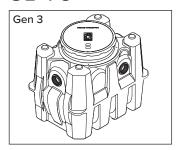


Years produced: 2020 - present Identification: 24" covers with Safety Star® access restrictors.

Flow rate/grease capacity: 75 GPM / 861 lbs. (118 gal.) Liquid capacity: 125 gal.

Solids capacity: 31 gal.


# GB-500-B (99%)

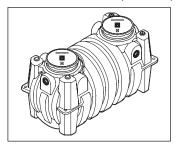

Years produced: 2019 - present Identification: 24" covers with Safety Star® access restrictors.
Flow rate/grease capacity:

100 GPM / 2,817 lbs. (386 gal.) Liquid capacity: 510 gal. Solids capacity: 102 gal.

# GB-75-B (99%)

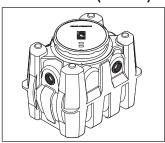


Years produced: 2020 - present Identification: 24" covers with Safety Star® access restrictors.

Flow rate/grease capacity: 50 GPM / 623 lbs. (85 gal.) Liquid capacity: 125 gal.

Solids capacity: 0 gal.

### GB-1000

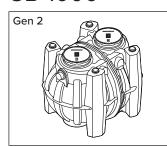

Years produced: 2021 - present Identification: 24" covers with Safety Star® access restrictors.


Flow rate/grease capacities:

100 GPM / 5,495 lbs. (716 gal.)

200 GPM / 4,959 lbs. (647 gal.)

**Liquid capacity:** 1,000 gal. **Solids capacity:** 211 gal.

### **GB-250**

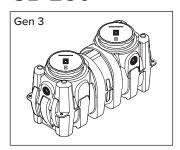


Years produced: 2020 - present Identification: 24" covers with Safety Star® access restrictors.

Flow rates/grease capacities: 100 GPM / 1,895 lbs. (260 gal.) 200 GPM / 1,196 lbs. (164 gal.)

Liquid capacity: 277
Solids capacity: 69 gal


## GB-1000 (99%)

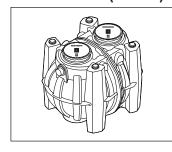

Years produced: 2021 - present Identification: 24" covers with Safety Star® access restrictors.

Flow rate/grease capacities: 100 GPM / 5,272 lbs. (687 gal.) 200 GPM / 3,127 lbs. (369 gal.) Liquid capacity: 1,000 gal. Solids capacity: 211 gal.

# GB-250-B (99%)

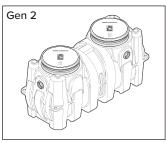


Years produced: 2020 - present Identification: 24" covers with Safety Star® access restrictors.

Flow rate/grease capacity: 75 GPM / 1,560 lbs. (214 gal.)

**Liquid capacity:** 277 gal. **Solids capacity:** 103 gal.


### GB-1500

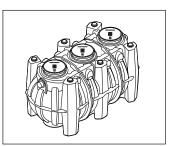

Years Produced: 2023 - present Identification: 24" covers with Safety Star® access restrictors.
Flow rate/grease capacities: 100 GPM / 10,061 lbs. (1,207 gal.) 200 GPM / 9,446 lbs (1,133 gal.)

**Liquid Capacity:** 1,588 gal **Solids Capacity:** 318 gal.

### **GB-500**

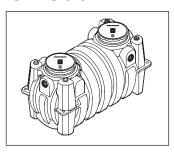

Years produced: 2018 - present Identification: 24" covers with Safety Star® access restrictors.

Flow rate/grease capacity: 100 GPM / 3,272 lbs. (448 gal.) 200 GPM / 2,969 lbs. (407 gal.)

**Liquid capacity:** 510 gal. **Solids capacity:** 128 gal.



# Routine maintenance procedure

- Remove cover(s). Do not remove Safety Star® access restrictor (if present) for routine maintenance.
- 2. Remove all interceptor contents including grease, sediment and wastewater. For most thorough cleaning contact a professional pumper contractor.
- 3. Run sinks to fill unit(s) with cold water.
- Inspect cover gasket for wear and tear. Replace cover(s).
   Avoid using power tools to tighten bolted covers as it may strip the heads.
- 5. Dispose of grease per local code.

**NOTE:** It is not necessary to remove the diffusers during routine maintenance unless there is a backup or drain lines require jetting. To remove most inlet and outlet diffusers, hand loosen the green locking collars. If interceptor is equipped with saddle adapters, pull the diffusers straight up to remove. With diffusers removed, clean the drain lines, diffusers and air relief thoroughly of all debris as needed.

# Routine maintenance clearance heights

The following are the minimum clearance heights required above the interceptor cover to be able to access and remove any internal interceptor components. These clearance heights apply to any generation of interceptor. Do not install permanent fixtures (i.e. plumbing) within these zones.

Model(s) GB1, GB2, GB3 GB-50		GB-50	GB-75, GB-250, GB-500	GB-1000, GB-1500	
Minimum clearance height (inches) 5.5 12		12	16	72	



# Calculating pump-out frequency

All grease interceptors have a maximum grease holding capacity. Once that maximum capacity is exceeded, fats, oils and grease (FOG) will bypass to the collection system, creating the potential for blockages. It's critical to determine an accurate pump-out schedule that ensures the interceptor gets pumped out only as often as necessary, but before it reaches its maximum rated capacity. Your Great Basin® grease interceptor should have been sized according to the Grease Production Sizing™ (GPS) and assigned a pump-out schedule prior to installation. If it wasn't, or if circumstances have changed, use the following formula to get your pump-out schedule back on track.

# Foodservice establishment (FSE) grease production values

CATEGORY	GREASE PRODUCTION VALUES	DESCRIPTION / EXAMPLES				
LOW	A 0.005 lbs / meal (no flatware)	serves food prepared offsite or food that requires minimal preparation and/or warming; bar (drinks only), coffee shop, continental breakfast, convenience store, deli, donut shop (w/o				
LOW	<b>B</b> 0.0065 lbs / meal (with flatware)	fryer), ice cream / yogurt / smoothies, pizza carryout, sandwich shop, sushi, snack bar				
MEDIUM	© 0.025 lbs / meal (no flatware)	serves foods from a limited menu and/or with a limited amount of onsite preparation; cafete (heat and serve), caterer, fast food (limited prep), pizza restaurant, salad/healthy bowls, low category restaurants w/ fryer				
MEDIUM	D 0.0325 lbs / meal (with flatware)					
HIGH	<b>B</b> 0.035 lbs / meal (no flatware)	serves a full menu of food prepared onsite; bakery, bar and grille, BBQ, buffet, cafeteria (full serve), Chinese, donut shop (w/fryer), family restaurant, fast food (full prep), fried chicken, Greek, grocery				
півн	6 0.0455 lbs / meal (with flatware)	store, Indian, Italian, seafood, steak house, Mexican, medium category restaurants w/ fryer				


Please note that GPS may not satisfy local jurisdictional requirements for installation approval and should always be verified prior to selection. The easiest way to verify sizing for any project is to use our Grease Monkey® sizing tool ( <a href="https://greasemonkeysizing.com/">https://greasemonkeysizing.com/</a>). When scheduling pump-outs, Schier recommends a pumping frequency between 30 and 90 days. Your calculations should be updated if number of meals per day, operating days per week or the menu types (more greasy or less greasy) change.

# Core samples

If you prefer not to rely solely on the GPSM to dictate prescheduled monthly pumpouts, you can take a more commanding role in dictating pump-out frequency with some simple tools and regular inspections. To do this you will need a core sampler. Popular brand names include DipStick Pro and Sludge Judge.

Once you have your core sampler, it can be outfitted with some simple labeling (via high adhesive tape or permanent marker) to indicate your pump-out levels (see below). Contact customer service if unsure what model you have.

# GB-250 (100 GPM) core sample at full capacity

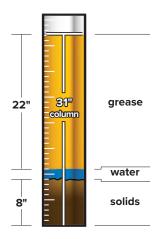

### Core sample measurements at full capacity\*

Model	ASME certification type	Flow rate (GPM)	Maximum grease capacity (lbs)	Total liquid height (In)	Maximum grease height (In)	Maximum grease % of volume	Maximum solids height (In)
GB1	С	20	70	5.25	5	95%	0.75
GB1	C	25	64	5.25	4.6	88%	0.75
GB1-CT	С	15	70	5.25	4.6	88%	0.75
GB2	C	35	130	7	6.25	89%	0.75
GB2	С	50	127	7	6.1	87%	0.75
GB2-2 (99%)	С	35	180	7	2.6	62%	0
GB2-CT	С	25	127	7	6.1	87%	0.75
GB3	С	50	272	13.75	12.8	93%	0.75
GB3	С	75	175	13.75	8.25	60%	0.75
GB3-CT	С	75	175	13.75	8.25	60%	0.75
<b>GB-50</b> (Gen 2)	D	50	439	17.5	13	75%	3.25
<b>GB-50</b> (Gen 2)	D	75	287	16.25	9.5	58%	3.25
<b>GB-75</b> (Gen 2)	С	75	653	24	17.3	71%	1.5
<b>GB-75</b> (Gen 3)	D	75	861	24	17.5	75%	6.75
GB-75-B (Gen 3, 99%)	D	50	623	24	16.5	68%	6
<b>GB-250</b> (Gen 3)	D	100	1,895	29.5	22	93%	8.5
GB-250 (Gen 2 & 3)	С	200	1,196	36	20	59%	2.6
GB-250-B** (Gen 4, 99%)	D	75	1,560	29.5	22	77%	6.5
GB-500	С	100	3,048	35	25.8	82%	10.9
GB-500-B** (99%)	D	100	2,817	35	30.5	76%	0
GB-1000** (Gen 2)	D	100	5,495	53	42	74%	21
<b>GB-1000**</b> (Gen 2)	D	200	4,959	53	34.5	67%	21
<b>GB-1000</b> ** (Gen 1, 99%)	С	100	6,237	53	39.75	85%	4.8
GB-1000** (Gen 2, 99%)	D	100	5,272	53	35.5	71%	21
<b>GB-1000**</b> (Gen 2, 99%)	D	200	3,127	53	21.5	42%	21
GB-1500**	D	100	10,061	57	48	86%	16
GB-1500**	D	200	9,446	57	41	81%	16

<sup>\*</sup> Please note that as the grease layer inside of a grease interceptor accumulates it displaces the water below it downward. Much like an iceberg this grease layer will partially float above the static water line while the majority of it rests below it. As a result, the static water line of grease interceptor when at total grease capacity is slightly greater than the standard published static water line.

 $<sup>^{**}\,\</sup>mbox{For tanks}$  with baffles, maximum grease height and volume is taken from outlet chamber

# Kitchen best management practices

The following kitchen best management practices (BMPs) will help reduce the cost to clean and maintain your grease interceptor and keep your facility in good standing with local pretreatment authorities.



Use debris screens in all floor and sink drains. Regularly empty screens into trash.



Minimize use of food waste disposals to improve interceptor storage and reduce maintenance costs.




Dry-wipe food waste from dishes before washing and clean grease spills with disposable materials.



**NEVER** pour oil, fry oil, or melted lard or butter down drain line. Dispose these oils in appropriate container.



**NEVER** put chemicals for reducing grease into the drain system. The temporarily dissolved grease will bypass the interceptor and harden in downstream piping.

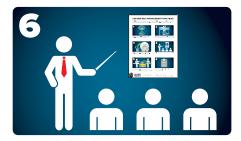

Implement BMP training program for kitchen staff.



Observe pumper contractor work to ensure interceptor is fully pumped out, properly cleaned and in good condition.



Make sure to run sinks to refill unit with cold water after pump-out.



Keep maintenance log detailing pump-outs, repairs and condition of interceptor.

# Maintenance log

Date	Action (Inspection/ pump-out)	Grease level (inches)	Solids level (inches)	Notes		
CONTACT INF	CONTACT INFORMATION Grease Permit #					
Pumper Contra	Pumper Contractor					
Sewer and Dra	Sewer and Drain Contractor					
Local Authority	Local Authority Having Jurisdiction					